



FINISH RINSE AID

FOR DRIER & SHINIER DISHES



Finish Rinse and Shine Aid provides 2x better drying* and fights water spots on your dishes and glasses. Its glass protection formula helps protect your glasses from becoming cloudy for a long-lasting sparkling shine. Up to 265 washed.*



SHINIER RESULTS



 
BETTER DRYING



PROTECTS AGAINST WATER SPOTS

TO BOOST YOUR DISHWASHING EXPERIENCE, WE RECOMMEND:

1



2



RINSE AND SHINE AID FOR DRIER AND SHINIER DISHES

3



DISHWASHER DEEP CLEANER FOR A CLEAN DISHWASHER

DESIGNED FOR

Suitable for all Dishwashers

Excellent for Office Kitchenettes



INFORMATION

EAN	SKU Code	Size
5011417552926	3212608	800ml

DIRECTIONS

See dishwasher instructions booklet on how to use Rinse Aid dispenser. Slowly pour the Finish Rinse Aid into the Rinse Aid dispenser. Wipe up any spills. Finish Rinse and Shine Aid is automatically released during the rinse cycle. Refill Rinse Aid dispenser as needed: by dishwasher machine indicator light.

#1

RECOMMENDED BRAND**

beko

BOSCH

DeLonghi

LG

Midea

SIEMENS

smeg

**Finish is recommended by renowned dishwasher manufacturers.